

Start ADC conversion function V. 1.0

Descriptions

The parameters and the instruction of this function are on web. This function must be call at least 100 micro seconds before read the value of the conversion.

In this sample program is used interrupt routine to transfer the output value conversion to the IMot variable

Syntax: ***StartADC()***

Input parameters:

Output parameters: ***IMot***

Status:

Calls: ***ISR(ADC_vet)***

